


QuantiFit2TM

QUICK START GUIDE


1 Connect power supply and turn on instrument

Rocker switch located on the upper left of back panel

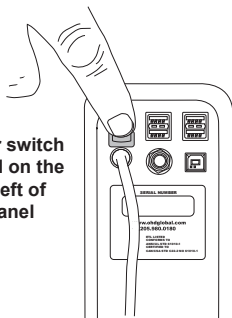

3 Daily Verification Check

Connect all tubes to the front of the instrument following the color coding labels

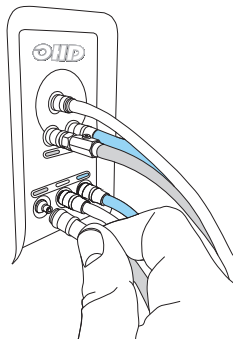

2 Follow Startup Wizard

For selection of language, regulations, masks, operators and test subjects

Initial Setup


You can change any of these settings at any time in the settings menu.

Press the arrow to proceed to set up regulation, respirators, and operators.

You can exit at any time by pressing the "X" icon on the following screens.



4 Remove 3 bottom hoses when complete

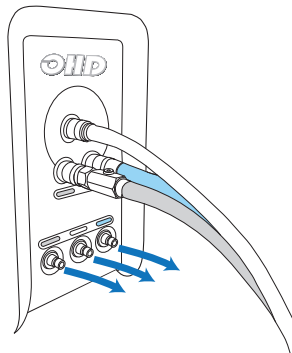

5 Select or enter test subject and press next

People


Search By: Last Name ☐ ID ☐

Select Company:

Ebright, Randolph	12128
Endow, Keith	68542
Esotiko, Mark	78546
Ester, Joseph	75669
Ewan, Christopher	26798

Add Delete History Edit Next (Test)

7 Prepare Mask:
Prop open or remove inhalation valves
(when valves are present on mask)

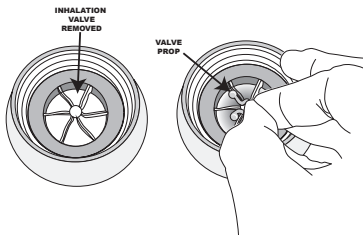

6 Enter all specified test information

OSHA Regulation

Person:


Respirator:

Size:


Operator:

Auto Start? ☐


8 Connect adapter(s) to mask

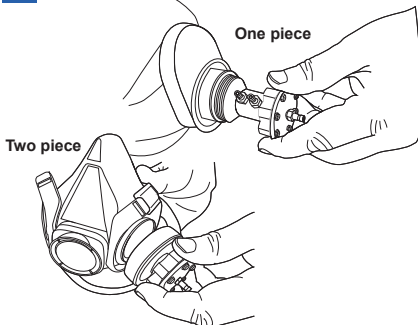

- 9** Connect tubes to adapter(s). The gray and clear tubes are interchangeable

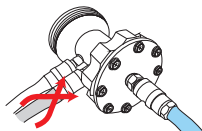

One piece

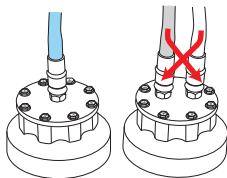

Two piece

- 11** Test:
Follow the on-screen instructions to proceed through the test.



- 10** Follow on-screen instructions

Step 1 of 5: Face Forward



1. Don the respirator and adjust the straps
2. Press the blue arrow to begin the test



- 12** End of test, operator and employee sign

Employee Signature



13 Confirm the mask size and model to proceed


Overall Fit Factor:
2702 Pass

<u>Step</u>	<u>Fit Factor</u>	<u>Leak Rate</u>	<u>3M 6000 Series</u>
Step 1	2972	31.3 cc/min	Medium →
Step 2	3011	30.9 cc/min	APR Half
Step 3	2644	35.2 cc/min	
Step 4	2824	32.0 cc/min	
Step 5	2897	32.1 cc/min	



15 Replace the inhalation valve or remove the valve prop that was placed at the beginning of the test

The Next arrow will lead to the next test

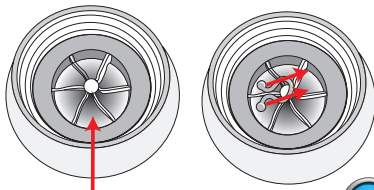

14 Print test, view the results, or move to the next screen



OVER ALL FIT FACTOR:

**1248
PASS**

Print
Report



Generate
PDF



Review
Test



Next
Test





2687 John Hawkins Pkwy
Hoover, AL 35244 - USA
+1 205.980.0180
© OHD 2020